

ASSEMBLY INSTRUCTIONS

1 / 8

PARTS



 
 
 
 
BARRIER



PIN

BARRIERS

NOTE: IF USING CORNERS AND MESH SEE CORNER & MESH INSTRUCTION SHEET FIRST

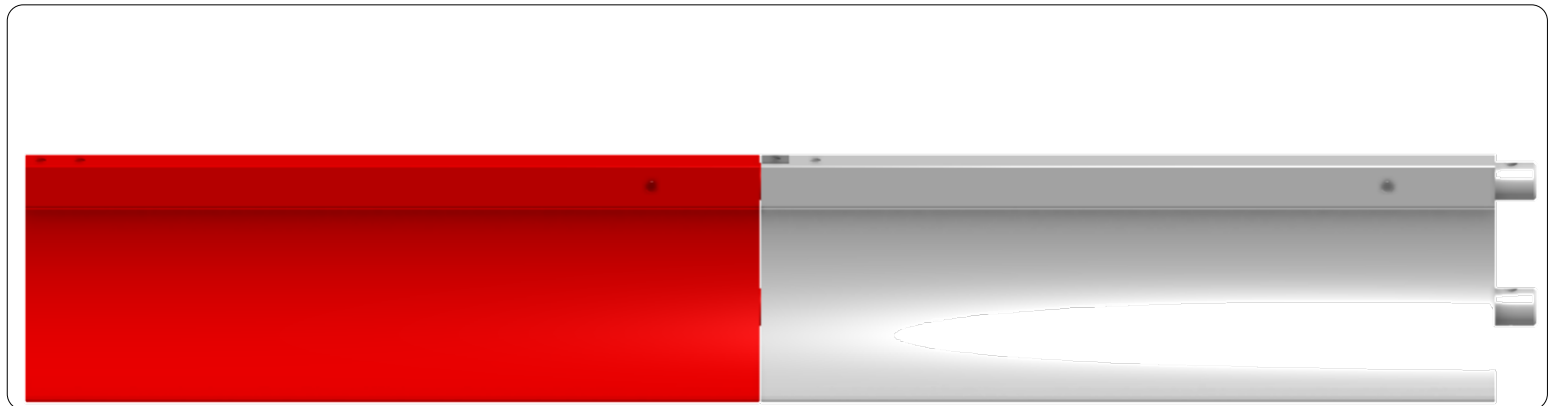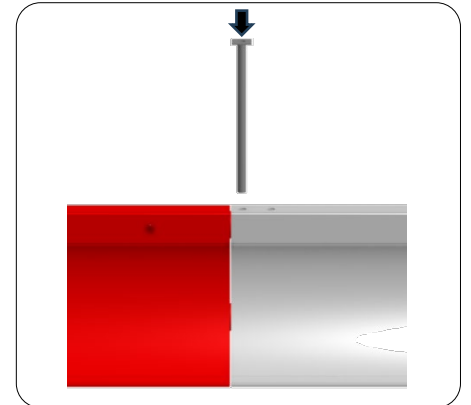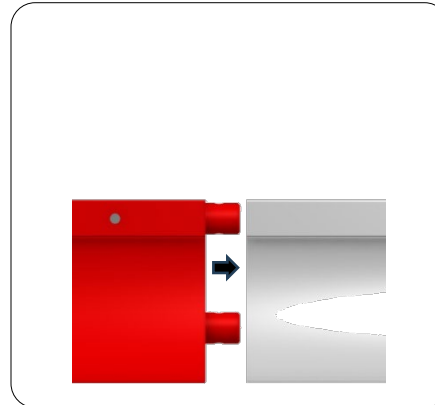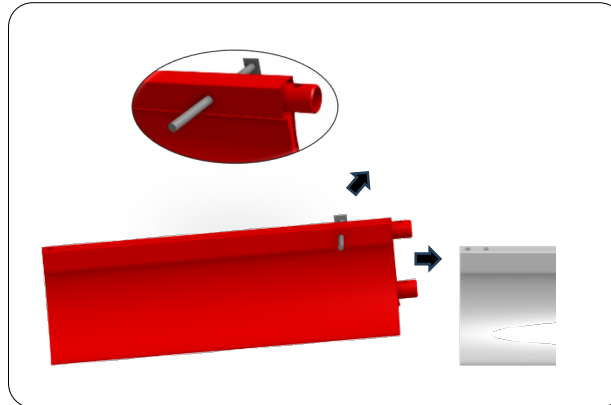

ASSEMBLY INSTRUCTIONS

2 / 8

BARRIER & MINI MESH

 
PARTS







BARRIER



PIN (for lifting)

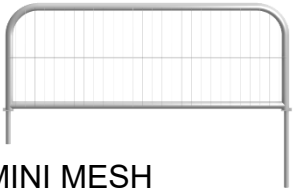

MINI MESH

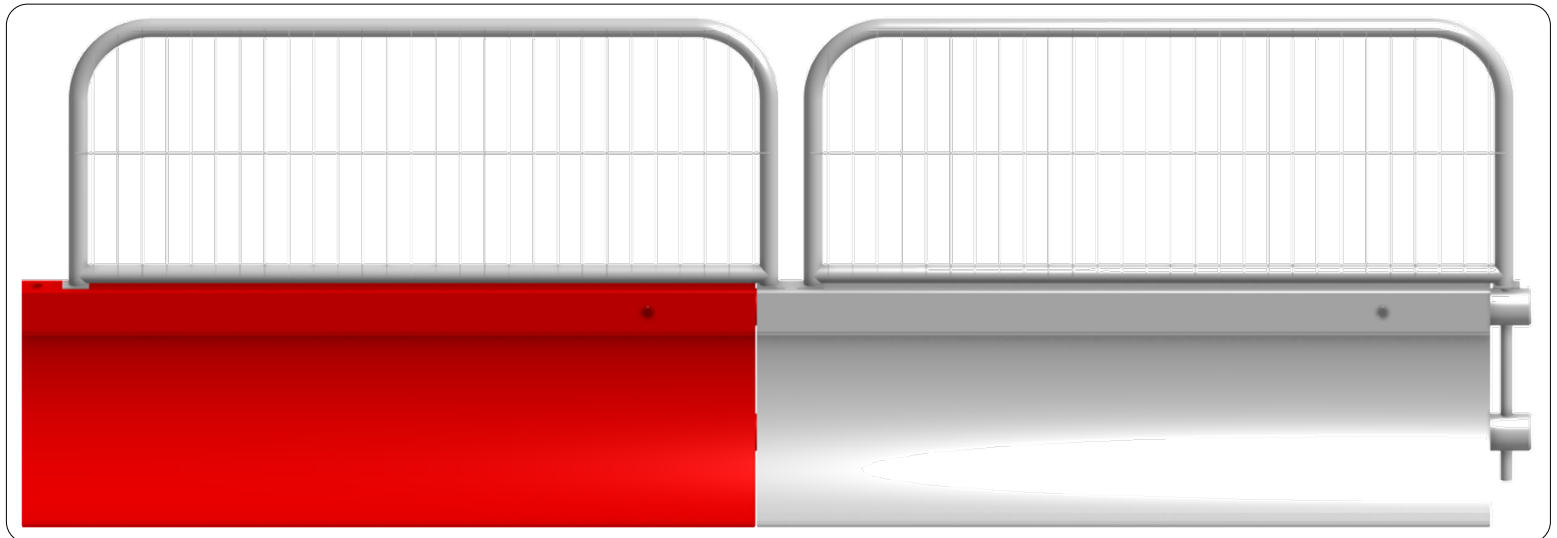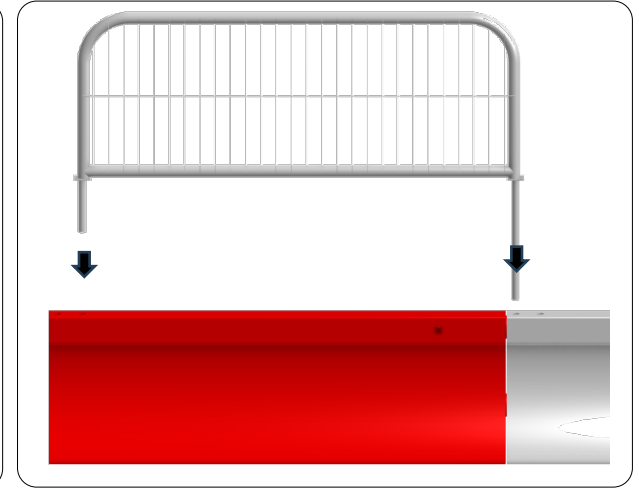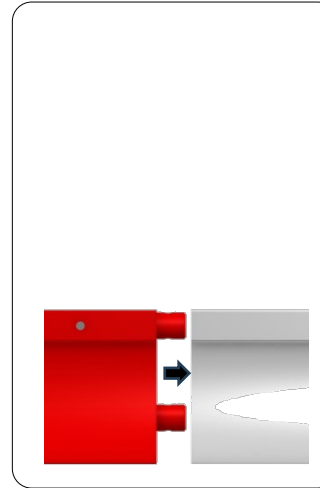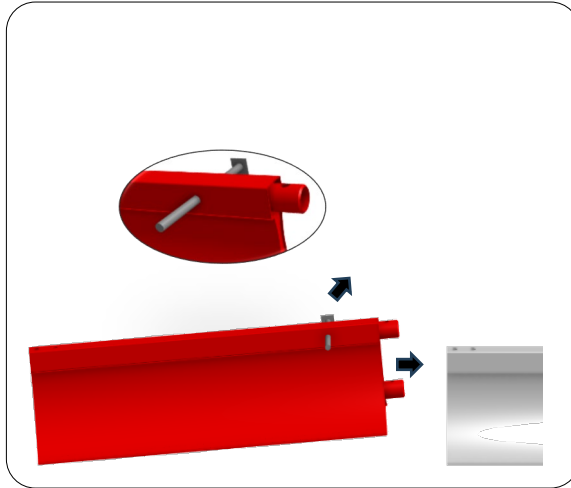    

ASSEMBLY INSTRUCTIONS

3 / 8

PARTS



CORNER FEMALE



 
 
 
 
CORNER MALE



PIN X 2

CORNERS

NOTE: IF USING CORNERS AND MESH READ CORNER & MESH INSTRUCTION SHEET FIRST

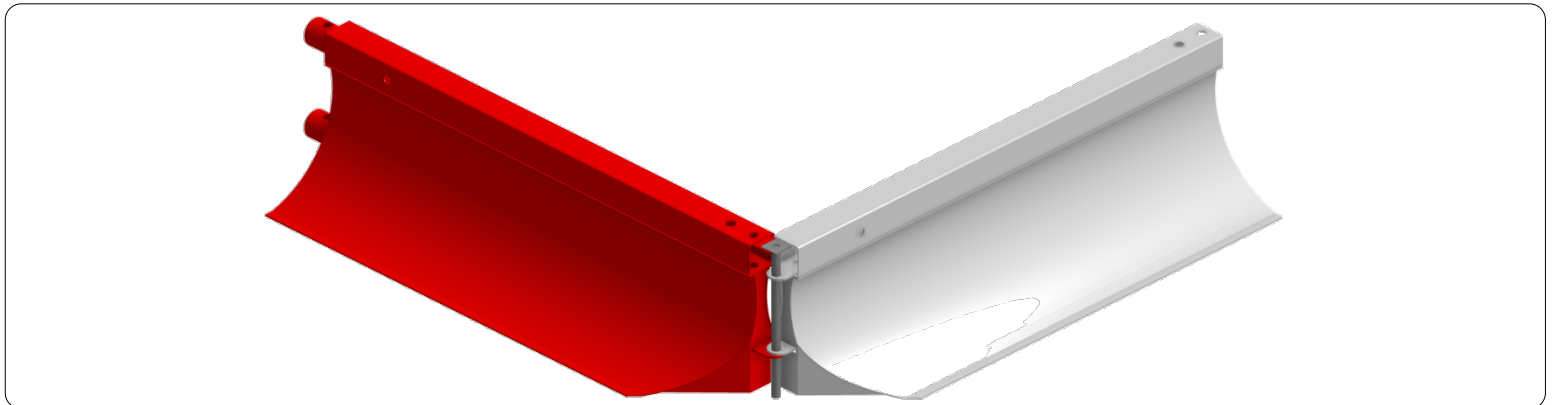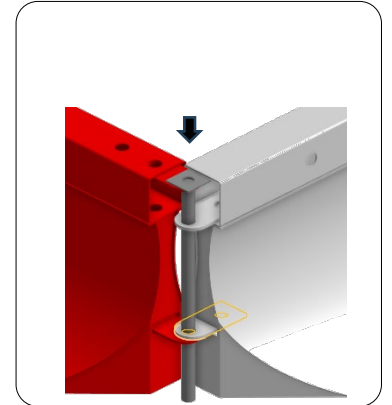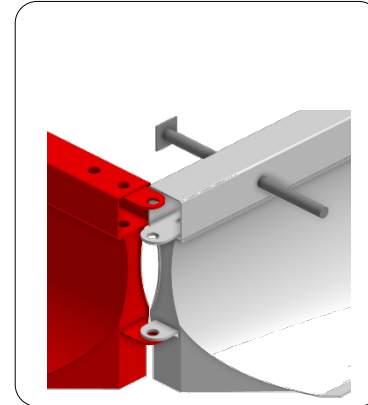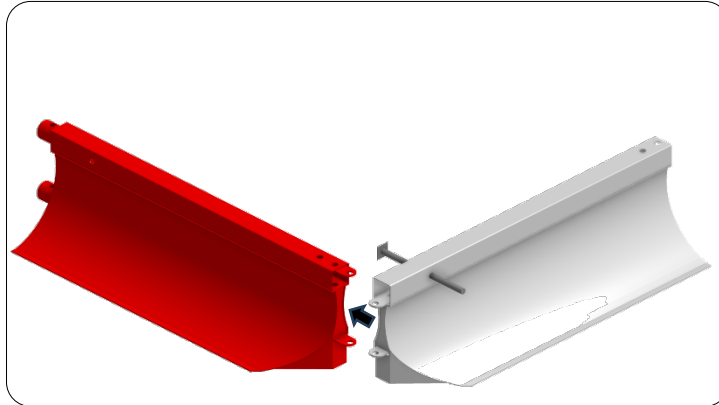

ASSEMBLY INSTRUCTIONS

4 / 8

CORNERS & MINI MESH

PARTS



 
CORNER FEMALE




CORNER MALE









PIN (for lifting)

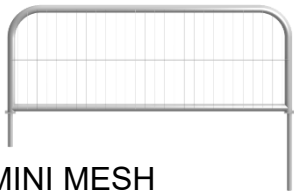

MINI MESH

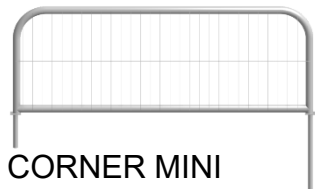 





CORNER MINI MESH

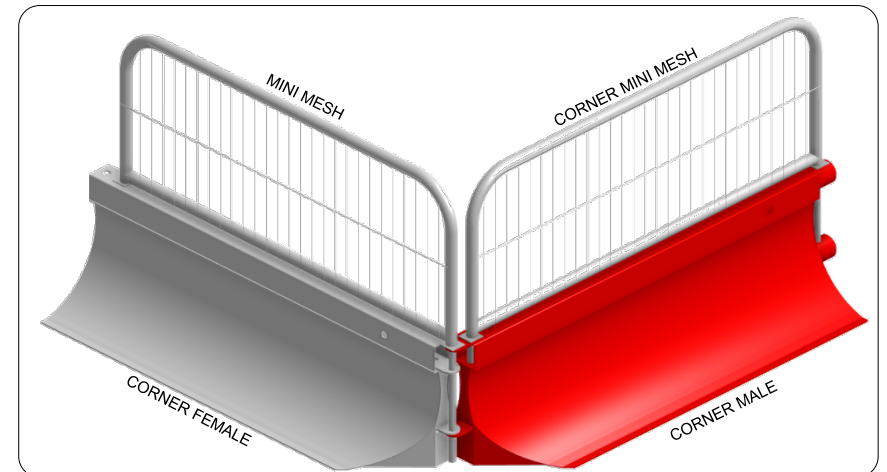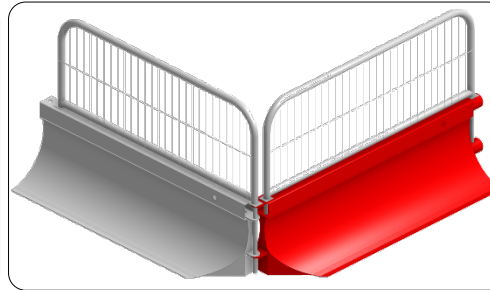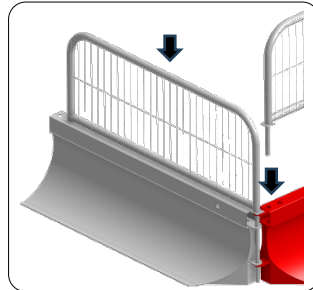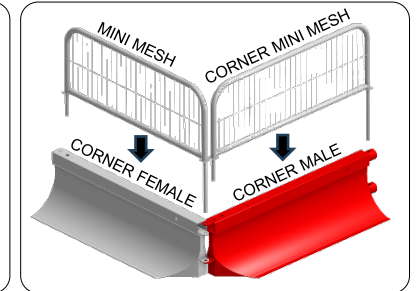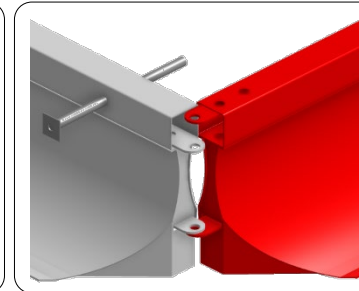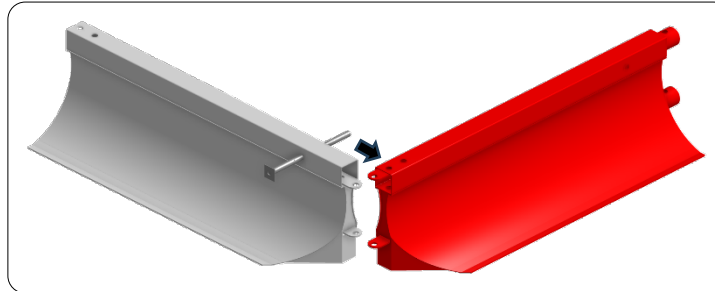      




ASSEMBLY INSTRUCTIONS

5 / 8

    MALE END STOP

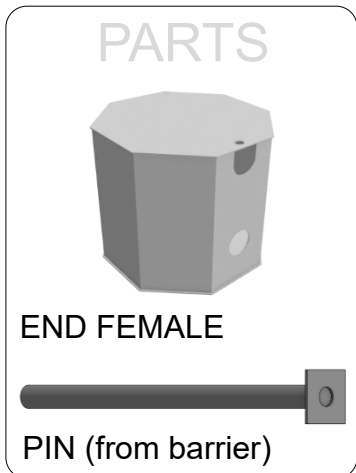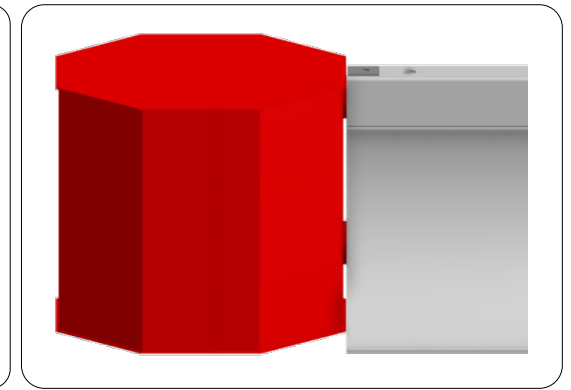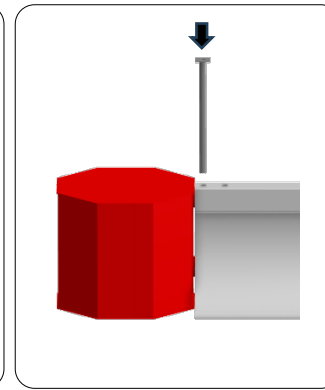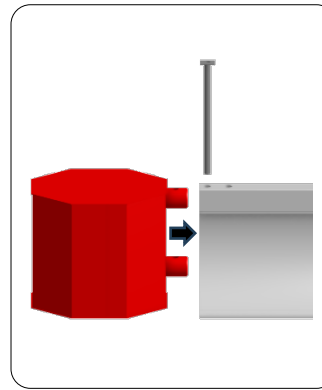

FEMALE END STOP

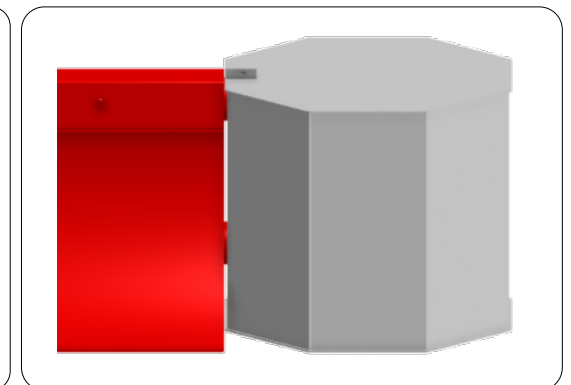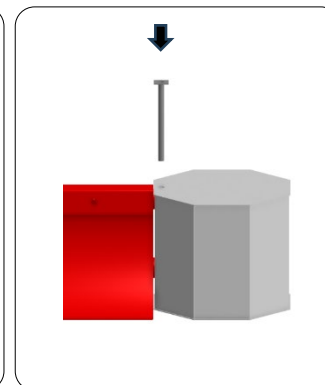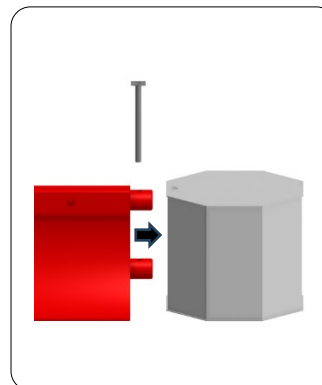   


ASSEMBLY INSTRUCTIONS

6 / 8

MALE END STOP, BARRIER & MESH



 
PARTS

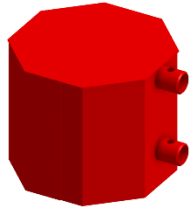


END MALE



   PIN

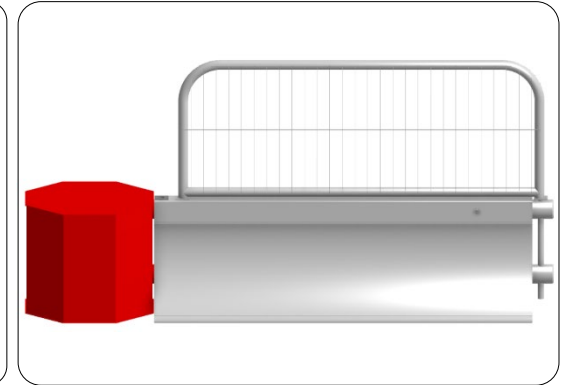
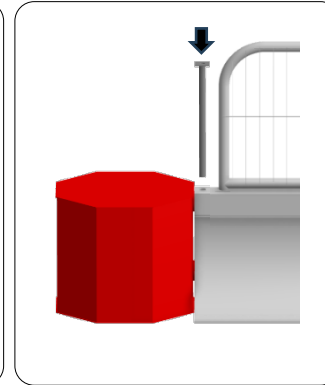
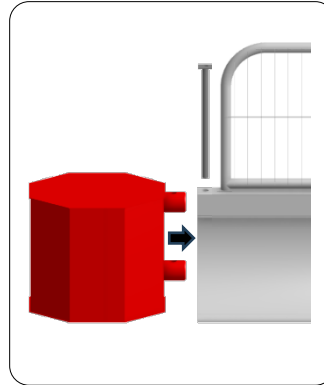


PARTS

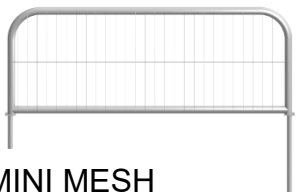 

MINI MESH

 
 
 
FEMALE END STOP BARRIER & MESH

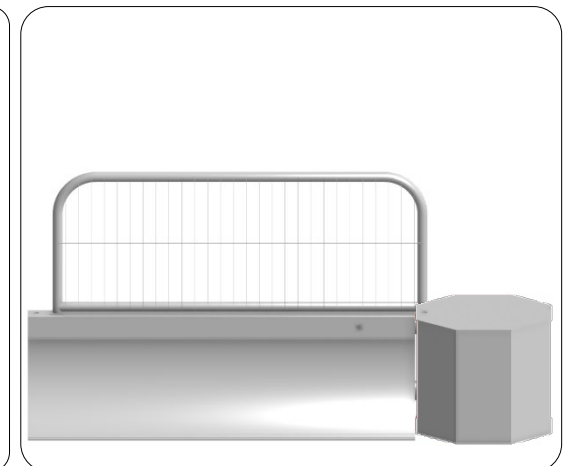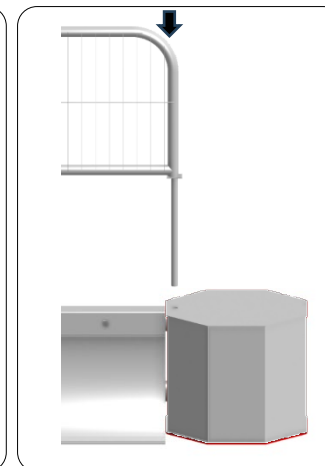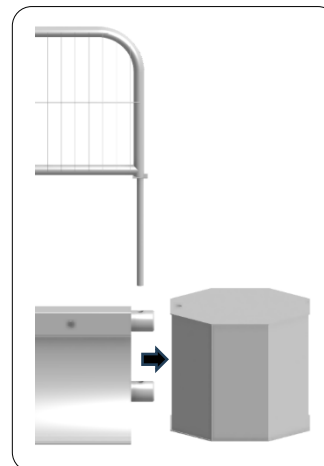

ASSEMBLY INSTRUCTIONS

7 / 8


 
 
 
END STOPS AND CORNERS

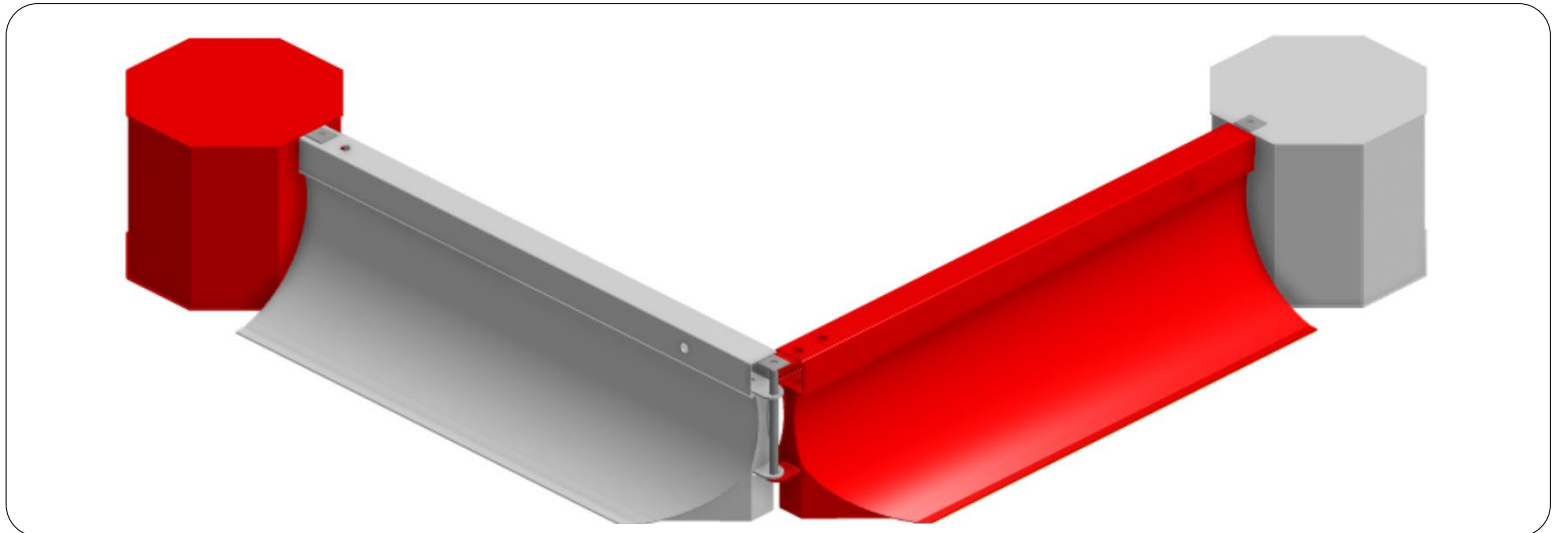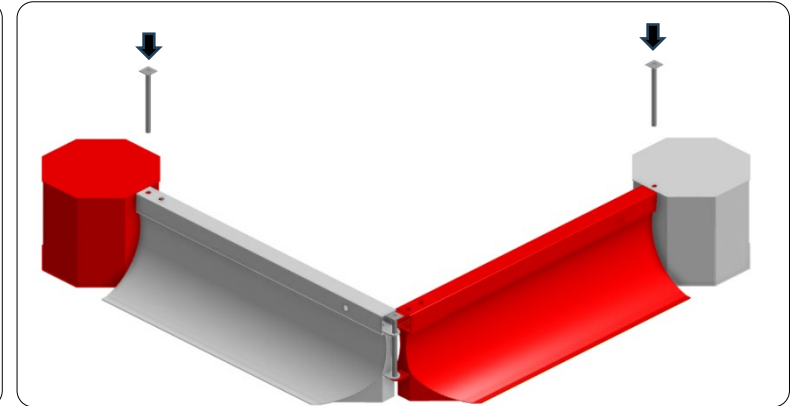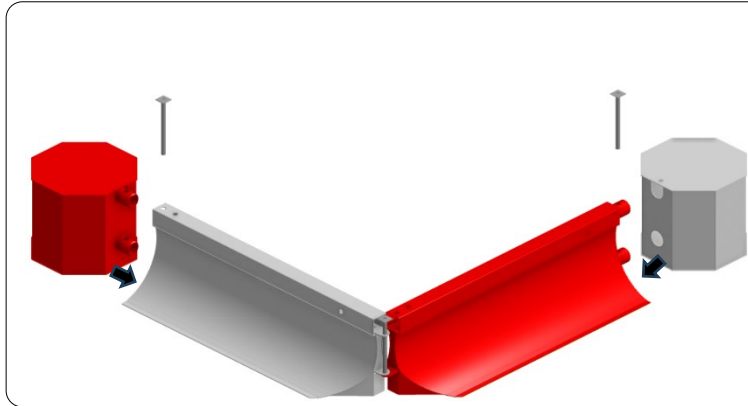

ASSEMBLY INSTRUCTIONS

8 / 8

    END STOPS, CORNERS & MESH

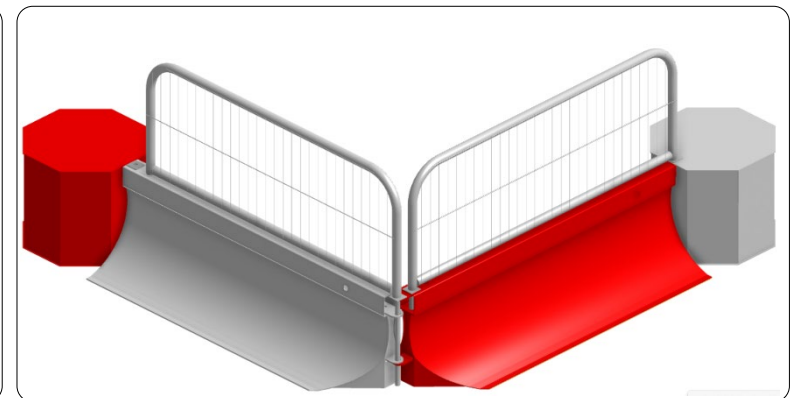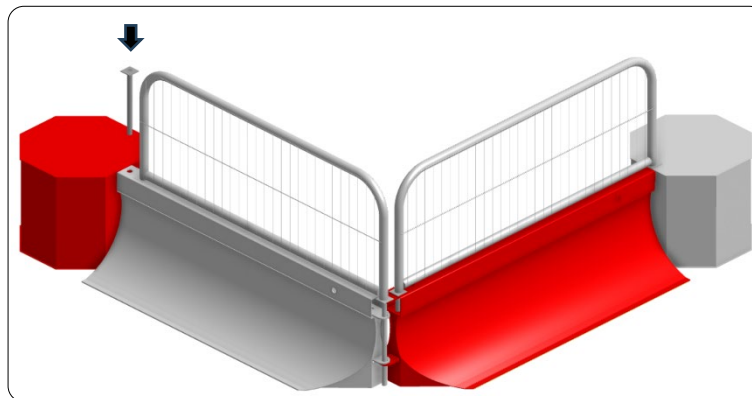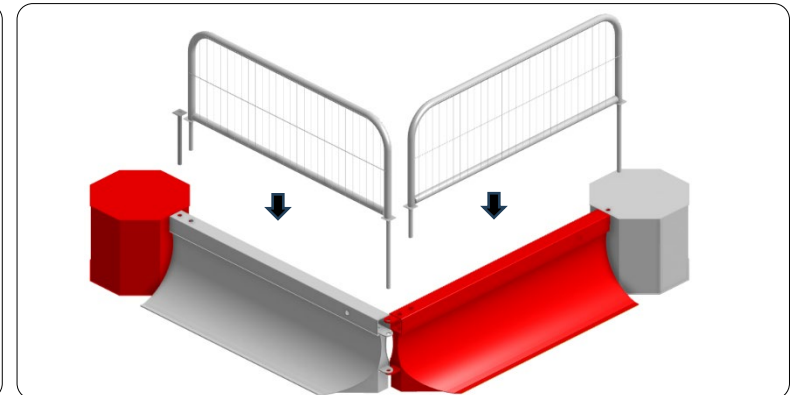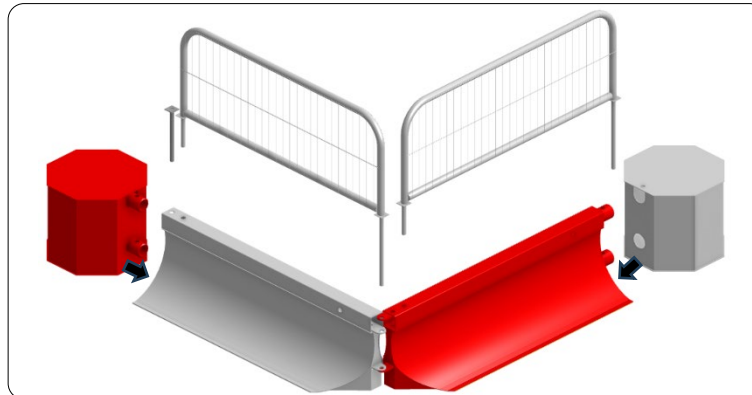

DATA SHEET

WARNING: FAILURE TO FOLLOW THESE GUIDELINES COULD RESULT IN INJURY OR DEATH

Oaklands Group always recommends that a site survey and a full risk assessment must be carried out before using the equipment.

It is the responsibility of the end user to make sure the system is suitable for their intended use. The system must be installed by an experienced and competent person and inspected regularly.

The information provided is for the Oaklands original parts and accessories only, and not valid for non-Oaklands supplied components.

Oaklands cannot be held responsible for the quality or performance of non-Oaklands supplied components.

1. Tipping and sliding values, where provided, are as guide only and It is the customers responsibility to ensure the barrier and fencing system selected is suitable for their specific location.
2. The system should be installed on a flat, level surface.
2. Connecting steel work and fencing systems must be regularly inspected for cracks of faults and replaced if faulty.
3. Connecting steel work fasteners must be regularly inspected for tightness.
4. In unsupported areas such as gates addition ballast may be required