

Torch Kit with Economiser Trigger

Instructions For Use

In case of any connections loosening during transport check for tightness.

Ensure the control knob on the torch handle is turned off in a clockwise direction.

Attach the regulator to the propane cylinder (Please note the connection is made using a left hand thread). Turn on the gas at the cylinder and check for any gas leaks before using. Use leak detector fluid for this. **DO NOT USE A NAKED FLAME.**

Lighting the Torch

1. Adjust the control knob on the top of the regulator to approximately halfway.
2. Open the control knob on the torch handle by a small amount.
3. Ignite the burner using a suitable gas lighter.

Setting the Flame Size

Turn on and set the size of the pilot flame using the control knob on the handle. By pulling the trigger on the handle the flame size will increase.

While holding the trigger adjust the knob on the regulator to achieve the maximum flame and heat output required from the burner.

On releasing the trigger the flame will return to its original pilot flame level.

Alternatively, if you do not wish to have to hold the trigger constantly to achieve and maintain your maximum flame you can do the following: once the torch is lit open the knob on the handle until the required size flame is achieved, this level will then be maintained regardless of the trigger position.

Turning the Torch Off

1. Release the trigger.
2. Turn off the gas at the cylinder allowing any gas left in the hose to be burned off.
3. Turn off the control knob on the handle in a clockwise direction.