

## **Skipper**<sup>™</sup>

The total safety management solution

the UK


Made i




## Usage guidelines



## The Skipper **XS** suction pad holder/receiver

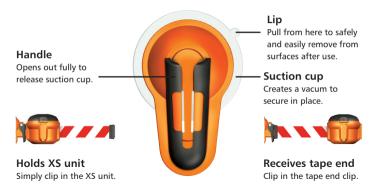



With the handle fully open, press firmly to glass or a high gloss surface and then close the handle until it clicks into place



Then simply attach either a Skipper XS unit, or any Skipper tape end by clicking into place



To remove, fully open the handle and pull away from the surface by peeling from the lip

**IMPORTANT NOTICE**: Always fully open the handle and pull from the lip to remove safely. Do not attach to painted walls as this could cause damage